



# RCM420-DM



## **Residual current monitor**

for AC current monitoring in TN and TT systems  
with an analogue interface

Software version: D240 v1.2x



**Bender GmbH & Co. KG**

P.O. Box 1161 • 35301 Gruenberg • Germany

Londorfer Strasse 65 • 35305 Gruenberg • Germany

Tel.: +49 6401 807-0 • Fax: +49 6401 807-259

E-Mail: [info@bender.de](mailto:info@bender.de) • [www.bender.de](http://www.bender.de)

© Bender GmbH & Co. KG

All rights reserved.

Reprinting only with permission of the publisher.

Subject to change!

Photos: Bender archives

## Table of Contents

<b>1. Important information</b>	<b>7</b>
1.1 How to use this manual	7
1.2 Technical support: service and support	8
1.2.1 First level support	8
1.2.2 Repair service	8
1.2.3 Field service	9
1.3 Training courses	10
1.4 Delivery conditions	10
1.5 Inspection, transport and storage	10
1.6 Warranty and liability	11
1.7 Disposal	12
<b>2. Safety instructions</b>	<b>13</b>
2.1 General safety instructions	13
2.2 Work activities on electrical installations	13
2.3 Intended use	14
<b>3. Function</b>	<b>15</b>
3.1 Device features	15
3.2 Function	15
3.2.1 Connection monitoring	16
3.2.2 Additional cascaded measuring current transformer	16
3.2.3 Fast response value query	16
3.2.4 Automatic self test	16
3.2.5 Manual self test	16
3.2.6 Functional faults	16
3.2.7 Start-up delay t	17
3.2.8 Residual current monitoring in window discriminator mode	17
3.2.9 Password protection (on, OFF)	17

3.2.10	Factory setting FAC .....	17
3.2.11	Erasable history memory .....	17
3.2.12	External, combined test resp. reset button T/R .....	17
3.2.13	Interface .....	18
<b>4.</b>	<b>Installation and connection .....</b>	<b>19</b>
<b>5.</b>	<b>Operation and setting .....</b>	<b>23</b>
5.1	Display elements .....	23
5.2	Function of the operating elements .....	24
5.3	Menu structure .....	24
5.4	Display in standard mode .....	26
5.5	Display in menu mode .....	27
5.5.1	Parameter query and setting: Overview .....	27
5.5.2	Changeover from overcurrent to undercurrent operation or to window operation .....	29
5.5.3	Response value setting for overcurrent: .....	30
5.5.4	Deactivating the fault memory .....	31
5.5.5	Select output current range of the analogue interface .....	31
5.5.6	Select output voltage range of the analogue interface .....	31
5.5.7	Set 100% value related to the analogue interface .....	32
5.5.8	Set the time delays .....	33
5.5.9	Changing from overcurrent operation to window operation .....	34
5.5.10	Setting the correction factor for an additional cascaded current transformer. ....	34
5.5.11	Factory setting and password protection .....	35
5.5.12	Re-establishing the factory settings .....	36
5.5.13	Device information query .....	36
5.5.14	History memory query .....	37
5.6	Commissioning and testing .....	37
5.7	Error codes .....	38
<b>6.</b>	<b>Technical data .....</b>	<b>39</b>
6.1	Data in tabular form .....	39

6.2	Standards, approvals and certification .....	42
6.3	Ordering information .....	43
6.4	Current and voltage curves of the analogue interface .....	44
<b>INDEX</b>	.....	<b>45</b>



# 1. Important information

## 1.1 How to use this manual



*This manual is intended for **qualified personnel** working in electrical engineering and electronics!*

### **Always keep this manual within easy reach for future reference.**

To make it easier for you to understand and revisit certain sections in this manual, we have used symbols to identify important instructions and information. The meaning of these symbols is explained below:



*This signal word indicates that there is a **high risk of danger** that will result in **electrocution** or **serious injury** if not avoided.*



*This signal word indicates a **medium risk of danger** that can lead to **death** or **serious injury** if not avoided.*



*This signal word indicates a **low level risk** that can result in **minor** or **moderate injury or damage to property** if not avoided.*



*This symbol denotes information intended to assist the user in making **optimum use** of the product.*

This manual has been compiled with great care. It might nevertheless contain errors and mistakes. Bender cannot accept any liability for injury to persons or damage to property resulting from errors or mistakes in this manual.

## 1.2 Technical support: service and support

For commissioning and troubleshooting Bender offers you:

### 1.2.1 First level support

Technical support by phone or e-mail for all Bender products

- Questions concerning specific customer applications
- Commissioning
- Troubleshooting

**Telephone:** +49 6401 807-760\*  
**Fax:** +49 6401 807-259  
In Germany only: 0700BenderHelp (Tel. and Fax)  
**E-mail:** support@bender-service.de

### 1.2.2 Repair service

Repair, calibration, update and replacement service for Bender products

- Repairing, calibrating, testing and analysing Bender products
- Hardware and software update for Bender devices
- Delivery of replacement devices in the event of faulty or incorrectly delivered Bender devices
- Extended guarantee for Bender devices, which includes an in-house repair service or replacement devices at no extra cost

**Telephone:** +49 6401 807-780\*\* (technical issues)  
+49 6401 807-784\*\*, -785\*\* (sales)  
**Fax:** +49 6401 807-789  
**E-mail:** repair@bender-service.de

Please send the devices for **repair** to the following address:



Bender GmbH, Repair-Service,  
Londorfer Str. 65,  
35305 Gruenberg

### 1.2.3 Field service

On-site service for all Bender products

- Commissioning, configuring, maintenance, troubleshooting of Bender products
- Analysis of the electrical installation in the building (power quality test, EMC test, thermography)
- Training courses for customers

**Telephone:** +49 6401 807-752\*\*, -762 \*\*(technical issues)  
+49 6401 807-753\*\* (sales)  
**Fax:** +49 6401 807-759  
**E-mail:** [fieldservice@bender-service.de](mailto:fieldservice@bender-service.de)  
**Internet:** [www.bender-de.com](http://www.bender-de.com)

\*Available from 7.00 a.m. to 8.00 p.m. 365 days a year (CET/UTC+1)

\*\*Mo-Thu 7.00 a.m. - 8.00 p.m., Fr 7.00 a.m. - 13.00 p.m

### **1.3 Training courses**

Bender is happy to provide training regarding the use of test equipment. The dates of training courses and workshops can be found on the Internet at [www.bender-de.com](http://www.bender-de.com) -> Know-how -> Seminars.

### **1.4 Delivery conditions**

Bender sale and delivery conditions apply.

For software products the "Softwareklausel zur Überlassung von Standard-Software als Teil von Lieferungen, Ergänzung und Änderung der Allgemeinen Lieferbedingungen für Erzeugnisse und Leistungen der Elektroindustrie" (software clause in respect of the licensing of standard software as part of deliveries, modifications and changes to general delivery conditions for products and services in the electrical industry) set out by the ZVEI (Zentralverband Elektrotechnik- und Elektronikindustrie e. V.) (German Electrical and Electronic Manufacturer's Association) also applies.

Sale and delivery conditions can be obtained from Bender in printed or electronic format.

### **1.5 Inspection, transport and storage**

Inspect the dispatch and equipment packaging for damage, and compare the contents of the package with the delivery documents. In the event of damage in transit, please contact Bender immediately.

The devices must only be stored in areas where they are protected from dust, damp, and spray and dripping water, and in which the specified storage temperatures can be ensured.

## 1.6 Warranty and liability

Warranty and liability claims in the event of injury to persons or damage to property are excluded if they can be attributed to one or more of the following causes:

- Improper use of the device.
- Incorrect mounting, commissioning, operation and maintenance of the device.
- Failure to observe the instructions in this operating manual regarding transport, commissioning, operation and maintenance of the device.
- Unauthorised changes to the device made by parties other than the manufacturer.
- Non-observance of technical data.
- Repairs carried out incorrectly and the use of replacement parts or accessories not approved by the manufacturer.
- Catastrophes caused by external influences and force majeure.
- Mounting and installation with device combinations not recommended by the manufacturer.

This operating manual, especially the safety instructions, must be observed by all personnel working on the device. Furthermore, the rules and regulations that apply for accident prevention at the place of use must be observed.

## 1.7 Disposal

Abide by the national regulations and laws governing the disposal of this device. Ask your supplier if you are not sure how to dispose of the old equipment.

The directive on waste electrical and electronic equipment (WEEE directive) and the directive on the restriction of certain hazardous substances in electrical and electronic equipment (RoHS directive) apply in the European Community. In Germany, these policies are implemented through the "Electrical and Electronic Equipment Act" (ElektroG). According to this, the following applies:

- Electrical and electronic equipment are not part of household waste.
- Batteries and accumulators are not part of household waste and must be disposed of in accordance with the regulations.
- Old electrical and electronic equipment from users other than private households which was introduced to the market after 13 August 2005 must be taken back by the manufacturer and disposed of properly.

For more information on the disposal of Bender devices, refer to our homepage at [www.bender-de.com](http://www.bender-de.com) -> Service & support.

## 2. Safety instructions

### 2.1 General safety instructions

Part of the device documentation in addition to this manual is the enclosed "Safety instructions for Bender products".

### 2.2 Work activities on electrical installations



Only **qualified personnel** are permitted to carry out the work necessary to install, commission and run a device or system.



**DANGER**

#### **Risk of electrocution due to electric shock!**

Touching live parts of the system carries the risk of:

- An electric shock
- Damage to the electrical installation
- Destruction of the device

**Before installing and connecting the device, make sure that the installation has been *de-energised*.** Observe the rules for working on electrical installations.

If the device is used outside the Federal Republic of Germany, the applicable local standards and regulations must be complied with. The European standard EN 50110 can be used as a guide.

## 2.3 Intended use

The AC and pulsed DC sensitive residual current monitor RCM420 (Type A) from Bender is designed for fault and residual current monitoring in earthed power supply systems (TN/TT systems) where an alarm is to be activated in the event of a fault, but disconnection must be prevented. In addition, the device can be used to monitor single conductors, such as PE conductors, N-PE connections and PE-PAS connections.

Two separately adjustable response ranges  $I_{\Delta n1}$  and  $I_{\Delta n2}$  allow to distinguish between prewarning and alarm ( $I_{\Delta n1} = 50 \dots 100$  % of the set response value  $I_{\Delta n2}$ ).

In order to meet the requirements of the applicable standards, customised parameter settings must be made on the equipment in order to adapt it to local equipment and operating conditions. Please heed the limits of the range of application indicated in the technical data.

Any use other than that described in this manual is regarded as improper.

## 3. Function

### 3.1 Device features

- AC and pulsed DC sensitive residual current monitor Type A according to IEC 62020
- Analogue interface configurable acc. to response value or configurable
- Adjustable switching hysteresis
- r.m.s. value measurement
- Start-up delay
- Measured value display via multi-functional LC display
- Alarm indication via LEDs (AL1, AL2) and one changeover contact
- N/C operation or N/O operation selectable
- Password protection against unauthorized parameter changing
- Fault memory behaviour selectable
- CT connection monitoring

### 3.2 Function

Once the supply voltage  $U_s$  is applied, the start-up delay "t" is activated. Residual current monitoring takes place via an external measuring current transformer. The currently measured value is shown on the LC display. In this way any changes can be recognized easily, for example, when circuits are connected to the system.

If the measured value exceeds one or both response values the alarm LEDs light. In addition, an analogue alarm is output for further processing, for example, a current of 0...20 mA. If the fault memory is activated, the LEDs light until the **reset button R** is pressed or until the supply voltage is interrupted. The device function can be tested using the **test button T**. The **parameterization** of the device can be carried out via the LC display and the function keys integrated in the front plate and can be password-protected.

### 3.2.1 Connection monitoring

The CT connections are continuously monitored. In the event of a fault, the alarm LEDs AL1 / AL2 / ON flash (Error Code E.01). A second cascaded measuring current transformer will not be monitored.

### 3.2.2 Additional cascaded measuring current transformer

For applications where residual currents higher than 10 A occur, a second external transformer can be cascaded. The transformer's transmission ratio can be adapted using the correction factor  $n_{RCM}$  in the SEt menu. Refer to page 22 and page 34.

### 3.2.3 Fast response value query

With the display in standard mode, the currently measured response values  $I_{\Delta n1}$  and  $I_{\Delta n2}$  can be queried pressing the Up and Down keys (< 1.5 s). Switchover to the Menu mode is not required. If you want to exit the fast response value query, press the enter key.

### 3.2.4 Automatic self test

The device automatically carries out a self test after connecting to the system to be monitored and later every 24 hours. During the self test internal functional faults will be detected and appear in form of an error code on the display.

### 3.2.5 Manual self test

After pressing the test button for > 1.5 s, the device carries out a self test. During this test, internal functional faults are detected and will be displayed in form of an error code. While the test button T is pressed and held down, all device-related display elements appear on the display.

### 3.2.6 Functional faults

If an internal functional fault occurs, all three LEDs flash. An error code will appear on the display (E01...E32). ("Chapter 5.7 Error codes")



### 3.2.7 Start-up delay $t$

After connection to the supply voltage  $U_S$ , the alarm indication is delayed by the preset time  $t$  (0...10 s).

### 3.2.8 Residual current monitoring in window discriminator mode

Change the measuring principle by selecting the window mode (.SEt / In). In the window discriminator mode, the threshold values I1 and I2 represent the upper and the lower value. If the measured value is not within this area, an alarm is initiated by the device. See page 34.

### 3.2.9 Password protection (on, OFF)

When password protection is activated (on), settings can only be carried after entering the password (0...999).

### 3.2.10 Factory setting FAC

After activating the factory setting, all settings previously changed are reset to delivery status.

### 3.2.11 Erasable history memory

The first alarm value that occurs will be saved in this memory. The memory can be cleared via the menu HiS.

### 3.2.12 External, combined test resp. reset button T/R

Reset = Pressing the external button  $< 1.5$  s

Test = Pressing the external button  $> 1.5$  s

### 3.2.13 Interface

The device provides an analogue interface with galvanic isolation. One of three output signals can be selected from the associated menu. To receive no error (full scale of the connected measuring device), only use the output you have selected via the software:

- DC 0...400  $\mu$ A  
Current output for Bender measuring instruments of the 96.. series.
- DC 0...20 mA / 4...20 mA  
Standardized current output with selectable current ranges.
- DC 0...10 V  
Standardized voltage signal.

## 4. Installation and connection



Only **qualified personnel** are permitted to carry out the work necessary to install, commission and run a device or system.



**DANGER**


### **Risk of electrocution due to electric shock!**

Touching live parts of the system carries the risk of:

- An electric shock
- Damage to the electrical installation
- Destruction of the device

**Before installing and connecting the device, make sure that the *installation* has been *de-energised*.** Observe the rules for working on electrical installations.

### General dimension diagram and drawing for screw fixing

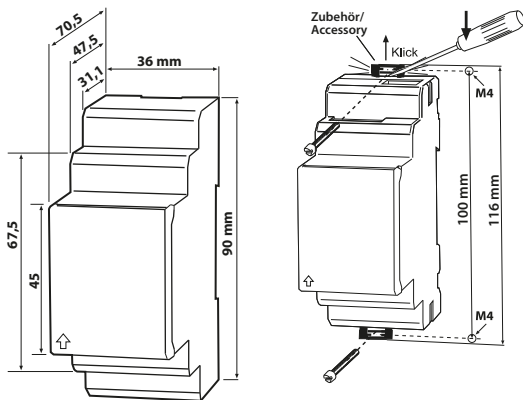

The front plate cover is easy to open at the lower part marked by an arrow.

### 1. DIN rail mounting:

Snap the rear mounting clip of the device into place in such a way that a safe and tight fit is ensured.

#### Screw fixing:

Use a tool to move the rear mounting clips (a second mounting clip required, see ordering information) to a position that it projects beyond the enclosure. Then fix the device using two M4 screws.

### 2. Wiring

Connect the device according the wiring diagram.

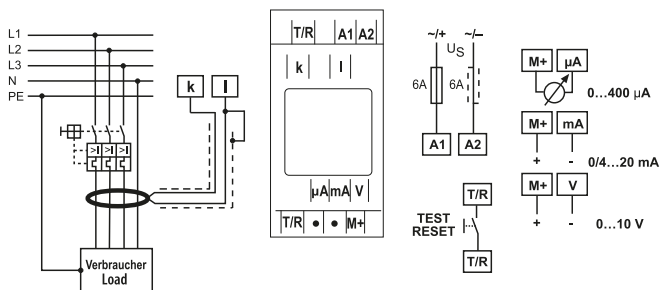



Abb. 4.1: Wiring diagram

## Key to wiring diagram

Terminal	Connections
<b>A1, A2</b>	Connection to supply voltage $U_s$
<b>k, l</b>	Connection of measuring current transformers
<b>T/R</b>	Connection to the combined test and reset button
<b>M+</b>	(common) positive pole of the analogue interface,
<b><math>\mu</math>A</b>	Current output 0...400 $\mu$ A
<b>mA</b>	Current output 0/4...20 mA
<b>V</b>	Voltage output 0...10 V

## Connection of an additional cascaded measuring current transformer

If the residual current range of 16 A is not sufficient, an additional measuring current transformer can be cascaded. Connect the measuring current transformer as illustrated in the drawing below.

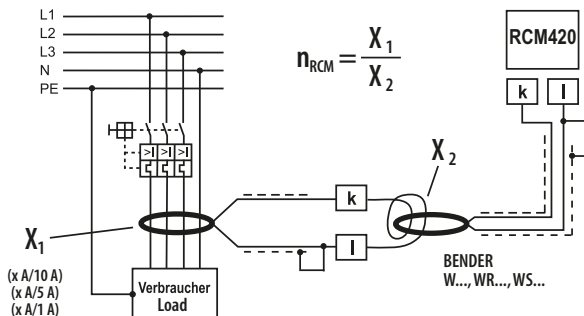

### Example:

An additionally cascaded transformer on the load side has a transmission ratio of  $X_1 = 100$  (500 A / 5 A). That means, when the lowest value of 10 mA is set at the RCM420, a current of 1 A can only just be detected on the primary side of the transformer on the load side. In order to reduce the value that can be detected to 100 mA, 10 turns of the supply cable has to be routed through the transformer on the RCM side.

Hence, the correction factor to be set is

$$n_{RCM} = X_1/X_2 = 100/10 = 10.$$



The correction factor can be set via the Set/n menu. Refer to page 34.

The correction factor is factory set to 1 and relates to normal operation with one Bender measuring current transformer only ( $X = 600:1$ ).


## 5. Operation and setting

### 5.1 Display elements

A detailed description of the meaning of the display elements is given in the table below.

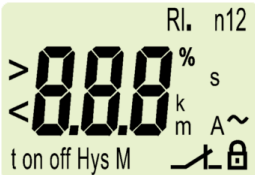Display elements	Element	Function
	n	Setting the correction factor for an additional cascaded current transformer.
	I2	Response value $I_{\Delta n2}$ as mA (Alarm 2)
	I1	Response value $I_{\Delta n1}$ as % of $I_{\Delta n2}$ (Alarm 1, prewarning)
	I Hys, %	Response value hysteresis as %
	t	Start-up delay t
	M	Fault memory active
		Password protection enabled

## 5.2 Function of the operating elements

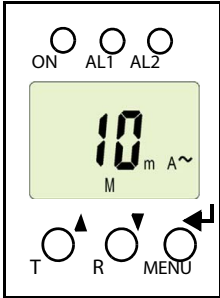
Device front	Element	Function
	<b>ON, green</b>	lights continuously: Power On LED flashes: System fault or connection monitoring fault
	<b>AL1, AL2</b>	LED Alarm 1 lights( yellow): Response value 1 reached ( $I_{\Delta n1}$ ) LED Alarm 2 lights (yellow): Response value 2 reached ( $I_{\Delta n2}$ )
	<b>10 mA M</b>	10 mA flow through the current transformer, fault memory active
	<b>T, ▲</b>	Test button (> 1.5 s): To view the available display elements, to start a self test; Up key (< 1.5 s): Menu items/values
	<b>R, ▼</b>	Reset button (> 1.5 s): Deleting the fault memory; Down key (< 1.5 s): Menu items/values
	<b>MENU, ◀</b>	MENU key (> 1.5 s): Starting the menu mode; Enter key (< 1.5 s): Confirm menu item, submenu item and value. Enter key (> 1.5 s): Back to the next higher menu level.

## 5.3 Menu structure




All adjustable parameters are listed in the columns "menu item" and "adjustable parameters". A display-like representation is used to illustrate the parameters in the column menu item.

Menu	Sub Menu	Menu item	Acti- vation	Adjustable parameter
AL (response - values)	→	> I2	- (Hi)	$I_{\Delta n2}$ (Alarm 2)
		> I1	- (Hi)	$I_{\Delta n1}$ as % of $I_{\Delta n2}$ (Alarm 1, prewarning)
		Hys	-	Hysteresis $I_{\Delta n1} / I_{\Delta n2}$
out (output con- trol)	→	M	-	Fault memory
		I, U	-	Selection current / voltage 0...400 $\mu$ A/0...10 V/ 0...20 mA/4...20 mA
	AnA Analogue outp.: 100% reference value	I2 AL	-	100 % value related to response value I2 (Alarm 2)
		I	-	100 % value related to the user-defined current value I
(timing check)	t →	t	-	Start-up delay

Menu	Sub Menu	Menu item	Acti- vation	Adjustable parameter
Set (device control)	→	I 12	HI	Selectable parameters: High, window function, low
		n	1	Transformation ratio factor external current transformer
			off	Parameter setting via password
		FAC	-	Re-establish factory settings
		SYS	-	Function blocked
InF	→	-	-	Display hardware / software version
HiS	→	Clr	-	History memory for the first alarm value, erasable

## 5.4 Display in standard mode

By default, the currently measured residual current is displayed. The current response values I1 (prewarning) and I2 (alarm) can be displayed using the Up and Down key. Press the enter key to return to the measured value.

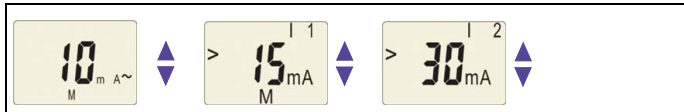


*In the standard mode, the currently set response values I1 and I2 can be displayed using the Up and Down keys.*

## 5.5 Display in menu mode

### 5.5.1 Parameter query and setting: Overview

Menu item	Adjustable parameter
AL	Response values query and setting: <ul style="list-style-type: none"> <li>– Residual current <math>I_{\Delta n2}</math> (AL2)</li> <li>– Residual current <math>I_{\Delta n1}</math> (AL1)</li> <li>– Hysteresis of the response values: % Hys</li> </ul>
out	Configuration of the fault memory: <ul style="list-style-type: none"> <li>– Activating/deactivating the fault memory</li> <li>– Select output signal</li> <li>– Select 100% value related to the output signal (AnA)</li> </ul>
t	Set start-up delay t
SEt	Device control parameter setting: <ul style="list-style-type: none"> <li>– Select the appropriate parameter for response values: overcurrent (HI), undercurr. (Lo) or window function (In).</li> <li>– Set the correction factor (n) for the 2nd measuring current transformer</li> <li>– Enable or disable password protection, change the password</li> <li>– Re-establish factory settings</li> <li>– Service menu SyS blocked</li> </ul>
InF	Query hard and software version
HiS	Query the first stored alarm value
ESC	Move to the next higher menu level (back)

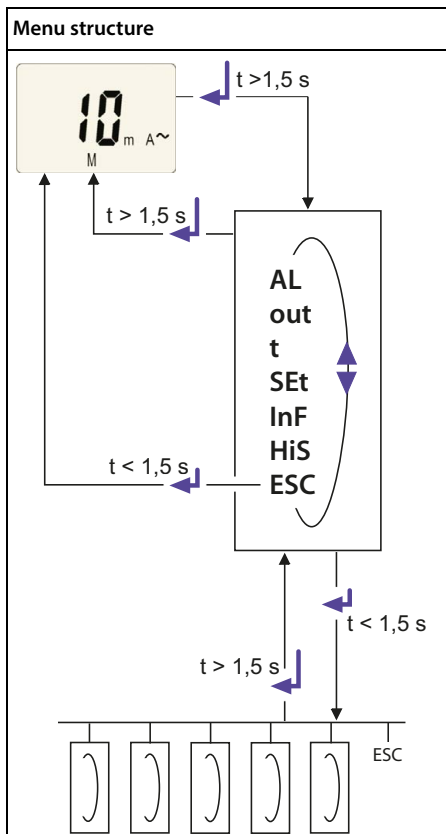

## Parameter settings

An example is given here on how to change the alarm response value I1 ( $I_{\Delta n1}$ ). It is presumed that the option overcurrent (HI) has been selected in the SEt/I12 menu (factory setting). Proceed as follows:

1. Press the MENU/Enter key for more than 1.5 seconds. The flashing short symbol AL appears on the display.
2. Confirm with Enter. The parameter response value  $> I2$  flashes, in addition the associated overcurrent value  $> 30$  mA appears.
3. Use the Down key to select the parameter response value I1. The parameter I1 flashes, in addition the associated percentage value for prewarning 50 % of I2 appears.
4. Confirm with Enter. The current value for prewarning appears on the flashing display.
5. Use the Up or Down key to set the appropriate response value. Confirm with Enter. I1 flashes.
6. You can exit the menu by:
  - Pressing the Enter key for more than 1.5 seconds to reach the next higher level or
  - selecting the menu item ESC and confirming with Enter to reach the next higher level.



*The currently active segments are flashing! In the figures below, the segments where device settings can be carried out are highlighted by an oval. The menu mode can be reached by pressing the MENU key for more than 1.5 seconds.*


### 5.5.2 Changeover from overcurrent to undercurrent operation or to window operation

The operating mode can be set in the SEt/I12 menu using the parameters HI, Lo and In. By default, overcurrent operation (HI) is set. Refer to page 34 for a detailed description on how to change over to window operation.


### 5.5.3 Response value setting for overcurrent:

- Response value I2 (overcurrent)
- Response value I1 (overcurrent)
- Hysteresis (Hys) of the response values I1, I2


#### Increasing the response value I2 (Example: overcurrent)

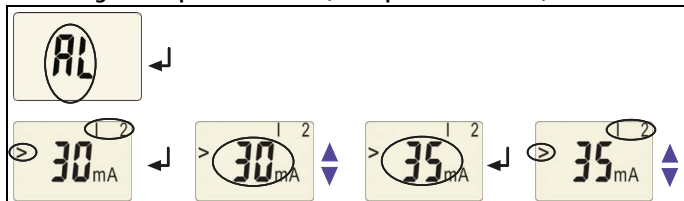


#### Increasing the response value I1 (prewarning overcurrent)

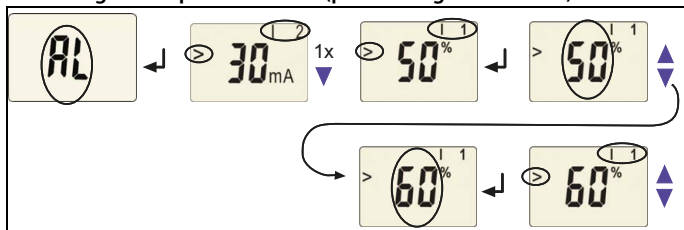


#### Setting the hysteresis of the response value

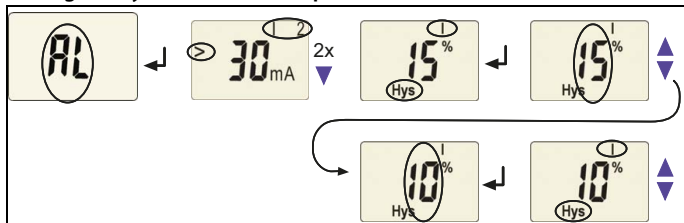

### 5.5.4 Deactivating the fault memory

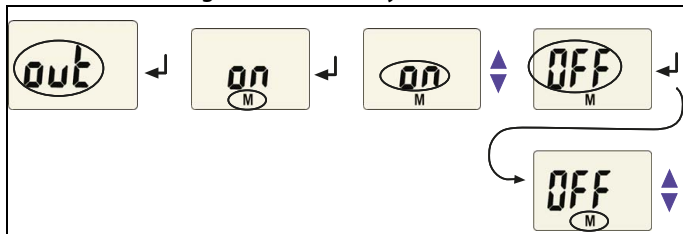

### 5.5.5 Select output current range of the analogue interface

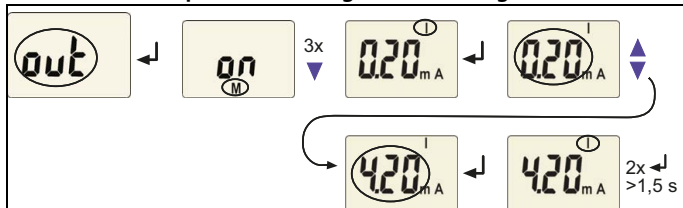


0.0.4 mA means 0...400  $\mu$ A

0.20 mA means 0...20 mA

4.20 mA means 4...20 mA

### 5.5.6 Select output voltage range of the analogue interface

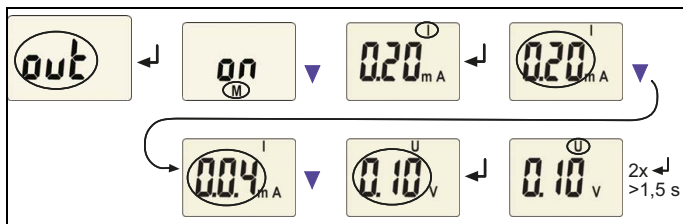


0.10 V means 0...10 V

### 5.5.7 Set 100% value related to the analogue interface

Set here whether the 100% value of the output signal is to be referred to response value I2 ( $I_{\Delta n2}$ ) (AL) or to a freely configurable value. Select the appropriate value from the range 10 mA...10 A.

Factory setting = related to the response value I2 ( $I_{\Delta n2}$ ) (AL).

The example below shows how to change the 100% reference of AL = related to the response value to a 100% value of 60 mA.

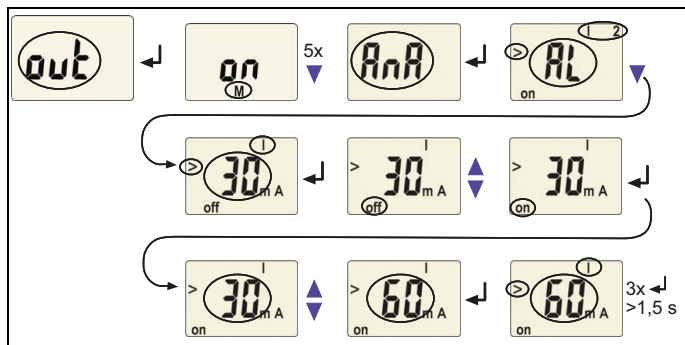




### 5.5.8 Set the time delays

The following delays can be set:


- Start-up delay  $t$  (0...10 s) when the device is being started

#### Set the start-up delay $t$

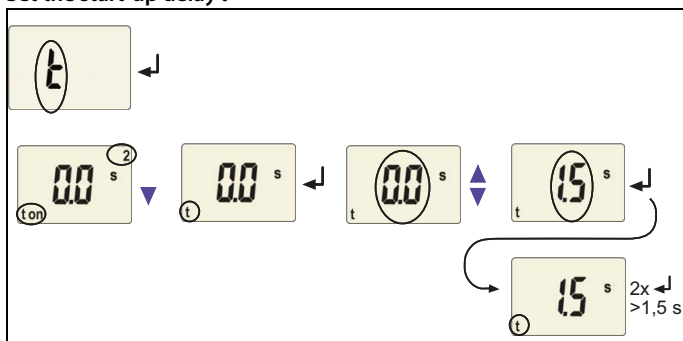


### 5.5.9 Changing from overcurrent operation to window operation

Use this menu item to set whether the response values of the device apply to overcurrent (HI) or undercurrent operation (Lo). In addition, window operation (In) can be selected.

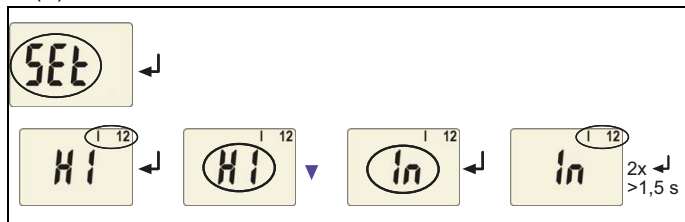

### 5.5.10 Setting the correction factor for an additional cascaded current transformer.

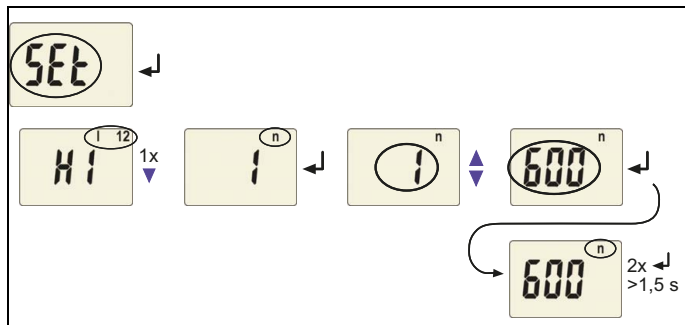


Factory setting without cascaded transformer:  $n = 1$ .


### 5.5.11 Factory setting and password protection

Use this menu to activate the password protection, to change the password or to deactivate the password protection. In addition, you can use this menu to reset the device to its factory settings.


#### a) Activating the password protection

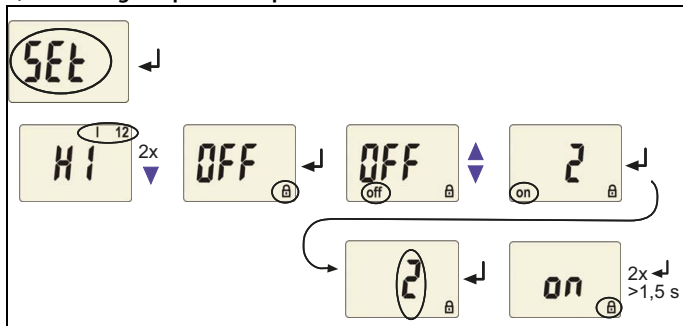


#### b) Changing the password

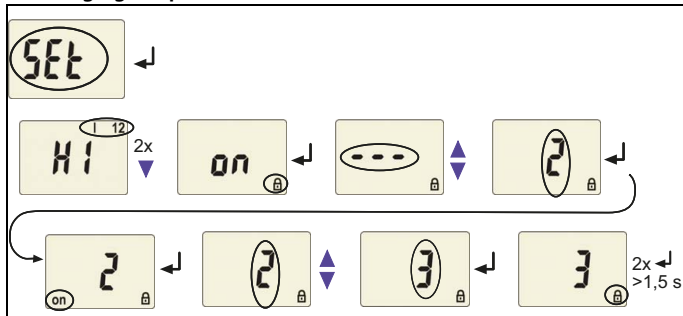

### c) Deactivating the password protection

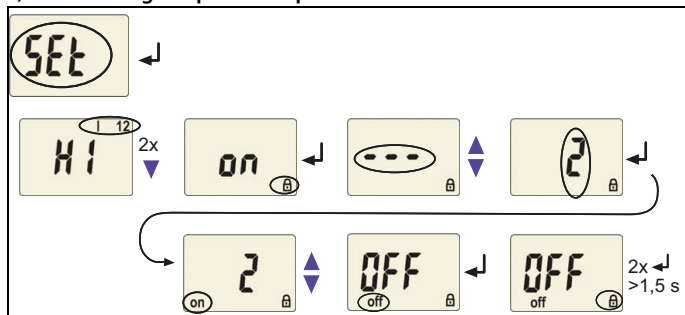


### 5.5.12 Re-establishing the factory settings

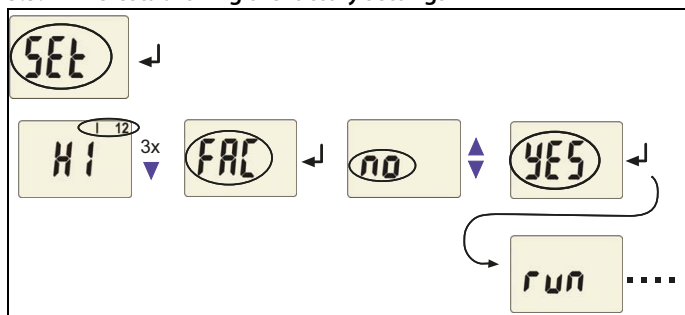


### 5.5.13 Device information query

This function is used to query the software (1.xx) version. After activating this function, data will be displayed as a scrolling text. Once one pass is completed you can select individual data sections using the Up/Down keys.

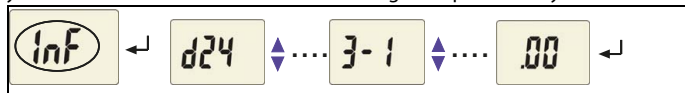

### 5.5.14 History memory query

The history memory can be selected via the menu HiS. Use the Up and Down keys to view the next display. If "Clr" is flashing, the history memory can be cleared by pressing the Enter key.

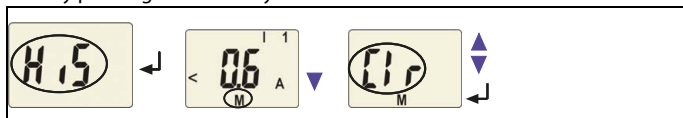

## 5.6 Commissioning and testing

Prior to commissioning, check proper connection of the residual current monitor.

### Factory setting



<i>Response value <math>I_{\Delta n2}</math>:</i>	30 mA (I2)
<i>Response value <math>I_{\Delta n1}</math>:</i>	50 % (I1)
<i>Hysteresis:</i>	15 %
<i>Fault memory M:</i>	activated
<i>100% value related to the analogue interface:</i>	Response value I2
<i>Start-up delay:</i>	$t = 0.5$ s
<i>Transformer correction factor <math>n</math> (<math>n_{RCM}</math>)</i>	1
<i>Password query:</i>	0, Off

## 5.7 Error codes

Should, contrary to all expectations, a device error occur, error codes will appear on the display. Typical error codes are described below:

Error code	Meaning:
E.01	Fault CT connection monitoring <b>Appropriate action:</b> Check CT connection for short-circuit or interruption. After eliminating the fault, the error code will be automatically deleted.
E.02	Fault CT connection monitoring during manual self test. <b>Appropriate action:</b> Check CT connection for short-circuit or interruption. After eliminating the fault, the error code will be automatically deleted.
E...	<b>Appropriate action</b> when error codes > 02 occur: Carry out a reset. Reset the device to factory setting. After eliminating the fault, the error code will be automatically deleted. If the fault continues to exist, please contact the Bender Service.

Errors are not displayed on the analog interface.

## 6. Technical data

### 6.1 Data in tabular form

( )\* = factory setting

#### Insulation coordination acc. to IEC 60664-1/IEC 60664-3

RCM420-DM-D-1:

Rated insulation voltage .....	100 V
Overtoltage category/ pollution degree.....	III/3
Rated impulse voltage .....	2,5 kV

RCM420-DM-D-2:

Rated insulation voltage .....	250 V
Overtoltage category/ pollution degree.....	III/3
Rated impulse voltage.....	4 kV

#### Supply voltage

RCM420-DM-D-1:

Supply voltage range $U_S$ .....	AC 24...60 V, DC 24...78 V
Operating range $U_S$ .....	AC 16...72 V / DC 9.6...94 V
Frequency range $U_S$ .....	DC, 42...460 Hz

RCM420-DM-D-2:

Supply voltage range $U_S$ .....	AC/DC 100...250 V
Operating range $U_S$ .....	AC/DC 70...300 V
Frequency range $U_S$ .....	42...460 Hz

Protective separation (reinforced insulation) between.....	(A1, A2) - (k/l, T/R) - (M+, $\mu$ A, V)
Voltage test according to IEC 61010-1 .....	2.21 kV
Power consumption .....	$\leq$ 4 VA

#### Measuring circuit

External measuring current transformer type.....	W..., WR..., WS...
Load.....	68 $\Omega$
Rated insulation voltage (measuring current transformer) .....	800 V
Operating characteristic acc. to IEC 62020 .....	type A
Frequency range .....	42...2000 Hz

Measuring range .....	3 mA ... 16 A
Relative uncertainty .....	0 ... -20 %
Operating uncertainty .....	0 ... 30 %

### Response values

Rated residual operating current $I_{\Delta n1}$ (prewarning, AL1) .....	50 ... 100 % $\times I_{\Delta n2}$ , (50 %)*
Rated residual operating current $I_{\Delta n2}$ (Alarm, AL2) .....	10 mA ... 10 A (30 mA)*
Hysteresis .....	10 ... 25 % (15 %)*

### Specified time

Start-up delay $t$ .....	0 ... 10 s (0.5 s)*
--------------------------	---------------------

### Cable lengths for measuring current transformers

Single wire $\geq 0.75 \text{ mm}^2$ .....	0 ... 1 m
Single wire, twisted $\geq 0.75 \text{ mm}^2$ .....	0 ... 10 m
Shielded cable $\geq 0.75 \text{ mm}^2$ .....	0 ... 40 m
Recommended cable (shielded, shield on one side connected to terminal I of the RCM420, not conn. to earth) .....	J-Y(St)Y min. 2 x 0.8
Connection .....	screw terminals

### Displays, memory

Display range, measured value .....	3 mA ... 16 A
Error of indication .....	$\pm 15 \% / \pm 2$ digit
Measured-value memory for alarm value .....	data record measured values
Password .....	off / 0 ... 999 (OFF)*
Fault memory .....	on / off (off)*

### Inputs/outputs

Cable length for external test / reset button .....	0 ... 10 m
Voltage output:	
No-load voltage (terminals open) .....	$\leq$ DC 20 V
Voltage output .....	<b>DC 0 ... 10 V</b>
Load .....	$\geq 1 \text{ k}\Omega$
Resolution .....	50 mV
Actuating time $1 \times I_{\Delta n}$ .....	$> 1,8 \text{ s}$
Actuating time $5 \times I_{\Delta n}$ .....	$> 360 \text{ ms}$



Current outputs:

Short-circuit current .....	≤ 30 mA, short-circuit proof
Current output .....	<b>DC 0/4...20 mA</b>
Load .....	≤ 500 Ω
Resolution .....	0,1 mA
Actuating time $1 \times I_{\Delta n}$ .....	> 1,8 s
Actuating time $5 \times I_{\Delta n}$ .....	> 360 ms
Current output .....	<b>DC 0...400 μA</b>
Load .....	≤ 12,5 kΩ
Resolution .....	2 μA
Actuating time $1 \times I_{\Delta n}$ .....	> 1,8 s
Actuating time $5 \times I_{\Delta n}$ .....	> 360 ms

**Environment/EMC**

EMC .....	IEC 62020
Operating temperature .....	-25 °C...+55 °C
Classification of climatic conditions IEC 60721	
Stationary use (IEC 60721-3-3) .....	3K5 (except condensation and formation of ice)
Transportation (IEC 60721-3-2) .....	2K3 (except condensation and formation of ice)
Storage (IEC 60721-3-1) .....	1K4 (except condensation and formation of ice)
Classification of mechanical conditions acc. to IEC 60721:	
Stationary use (IEC 60721-3-3) .....	3M4
Transportation (IEC 60721-3-2) .....	2M2
Storage (IEC 60721-3-1) .....	1M3

**Connection**

For UL application .....

use 60/70 °C copper conductors only

Connection type..... **screw-type terminals**

Connection properties:

rigid/ flexible/ conductor sizes .....	0.2...4/0.2...2.5 mm <sup>2</sup> / AWG 24...12
Multi-conductor connection (2 conductors with the same cross section):	
rigid, flexible .....	0.2...1.5/0.2...1.5 mm <sup>2</sup>
Stripping length .....	8...9 mm
Tightening torque .....	0.5...0.6 Nm

Connection type .....	<b>push-wire terminals</b>
Connection properties:	
Rigid .....	0.2 .. 2.5 mm <sup>2</sup> ( AWG 24 .. 14)
Flexible without ferrules .....	0.75 .. 2.5 mm <sup>2</sup> ( AWG 19 .. 14)
Flexible with ferrules .....	0.2 .. 1.5 mm <sup>2</sup> ( AWG 24 .. 16)
Stripping length .....	10 mm
Opening force .....	50 N
Test opening, diameter .....	2.1 mm

### Other

Operating mode .....	continuous operation
Mounting .....	any position
Protection class, internal components (DIN EN 60529) .....	IP30
Degree of protection, terminals (DIN EN 60529) .....	IP20
Enclosure material .....	polycarbonate
Flammability class .....	UL94 V-0
DIN rail mounting acc. to .....	IEC 60715
Screw fixing .....	2 x M4 with mounting clip
Software version .....	D240 V1.2x
Weight .....	≤ 160 g

( ) \* = factory setting

## 6.2 Standards, approvals and certification



### 6.3 Ordering information

	RCM420-D-1	RCM420-D-2
Response range $I_{\Delta n}$	10 mA...10 A	10 mA...10 A
Rated frequency	42...2000 Hz	42...2000 Hz
Measuring current transformers	W..., WR..., WS... series	W..., WR..., WS... series
Supply voltage $U_s^*$	DC 9.6 V...94 V / AC 42...460 Hz, 16...72 V	DC 70...300 V / AC 42...460 Hz, 70...300 V
Art. No. : (B7... = push wire terminal)	B 7401 4005 B 9401 4005	B 7401 4010 B 9401 4010
<b>*Absolute values of the voltage range</b>		

### External measuring current transformers

Type	Inside diameter (mm)	Art. No.
W20	20	B 9808 0003
W35	35	B 9808 0010
W60	60	B 9808 0018
W120	120	B 9808 0028
W210	210	B 9808 0034
WR70x175	70 x 175	B 9808 0609
WR115x305	115 x 305	B 9808 0610
WS50x80	50 x 80	B 9808 0603
WS80x120	80 x 120	B 9808 0606

### RCM420 accessories

Mounting clip for screw fixing (1 piece per device) ..... B 9806 0008


### Measuring current transformers accessories

Snap-on mounting for DIN rail: W20... /W35... ..... B 9808 0501


Snap-on mounting for DIN rail: W60 ..... B 9808 0502

## 6.4 Current and voltage curves of the analogue interface


### Current output 0/4...20 mA

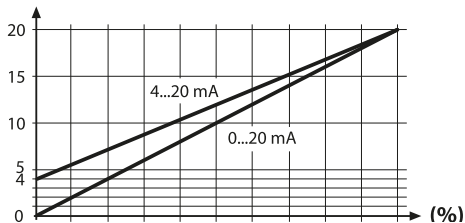

### Current output 0...400 $\mu$ A

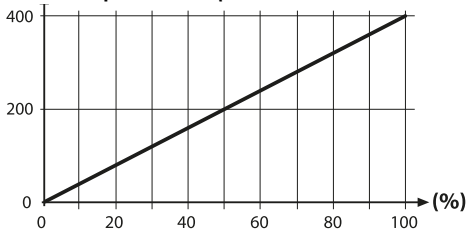

### Current output 0...10 V

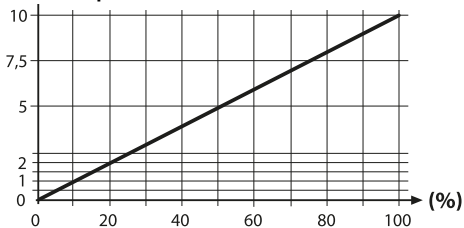

# INDEX

## A

- Adjustable parameters, list 25
- Automatic self test 16

## C

- Connection of an additional cascaded measuring current transformer 22

## D

- Deleting the fault alarms 24
- Device features 15
- Display elements 23
- Display in standard mode 26

## E

- ENTER key 24
- Error codes 38
- Example of parameter setting 29

## F

- factory setting 17, 37
- Function 15
- Functional faults 16

## H

- How to use this manual 7

## I

- Installation and connection 19

- Intended use 14

- Interface options 18

## L

- LED Alarm 1 lights 24
- LED Alarm 2 lights 24

## M

- Manual self test 16

### Menu

- AL (response values) 24, 25
- HiS (history memory for the first alarm value) 26
- InF (hard and software version) 26
- out (output control) 25
- Set (device control) 26
- t (timing check) 25

- Menu structure, overview 24

## O

- Operating elements, function 24
- Operation and setting 23
- Ordering information 43

## P

- Parameter query and setting, overview 27
- Parameter setting
  - Activating or deactivating the password protection 35

- Activating the fault memory 31
- Changing from overcurrent operation to window operation 34
- Select output current and output voltage range of the analogue interface 31
- Select output current range of the analogue interface 31
- Set response values 30
- Set the time delays 33

Password protection 17

## **R**

Reset button 24

Residual current monitoring in window discriminator mode 17

Response delay ton 17

## **S**

Select analogue interface, 31

Select the appropriate parameter for response values

- 27

Service 8

Set response values

- Hysteresis 30
- Overcurrent ( $> I$ ) 30

Set the analogue interface 32

Set the correction factor for additional cascaded current transformer. 34

Starting the menu mode 24

Start-up delay t 17

Support 8

## **T**

Technical data 39

Test button 24

Timing diagram

- Current monitoring 43

Training courses 10

## **W**

Window mode 34

Wiring diagram 20

Work activities on electrical installations 13 workshops 10





**Bender GmbH & Co. KG**

P.O. Box 1161 • 35301 Gruenberg • Germany  
Londorfer Strasse 65 • 35305 Gruenberg • Germany  
Tel.: +49 6401 807-0 • Fax: +49 6401 807-259  
E-Mail: [info@bender.de](mailto:info@bender.de) • [www.bender.de](http://www.bender.de)

Photos: Bender archives



**BENDER Group**